 




We create experiences

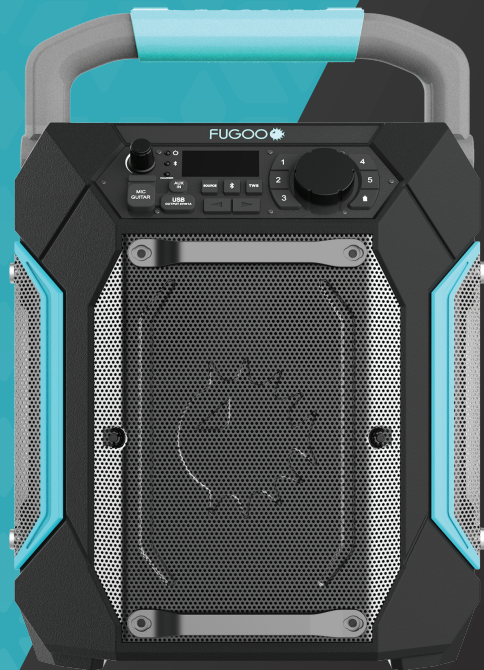

User Manual

TRAVELER

Bluetooth Speaker

Model: F6TRKS01

Contents

In the Box 1

Controls, Display & Functions 2

Battery & Power

 Charging The Unit 3

 Power 3

 Battery Status 3

 USB Power Bank 3

 Standby Mode 3

Audio

 GUITAR/MICROPHONE Input & GAIN knob 4

 AUX IN 4

 Equalizer PRESETS 4

 FM Radio & Radio PRESETS 4

 BLUETOOTH® Pairing 5

 TWS Pairing 5

 Audio Controls 5

Specifications 6

Legal notices (FCC & IC statements) 7

Limited Warranty 8-9


 Support 10

In the Box

- Fugoo Traveler Bluetooth speaker
- AC Power Cord (1.8M/71")
- Quick Start Guide & User Manual (Including Warranty Statement)


Controls, Display & Functions

 Front Control Panel

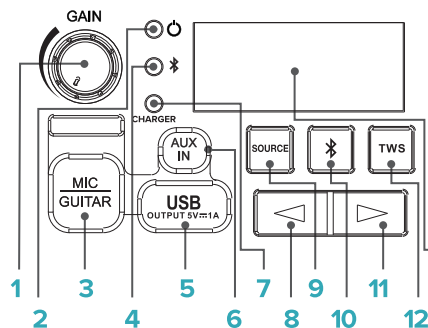


- 1 MIC/GUITAR GAIN knob
- 2 POWER LED (Green)
- 3 MIC/GUITAR 1/4" Input
- 4 BLUETOOTH® LED (Blue/Purple/Red)
- 5 USB Power Bank Output
- 6 3.5 mm AUX IN Input
- 7 CHARGE LED (Green)
- 8 Arrow PREVIOUS Button
- 9 Audio SOURCE Button
- 10 BLUETOOTH® Audio Button
- 11 Arrow NEXT Button
- 12 TWS Sync Button
- 13 LED Display (see 17-22)

 LED Display

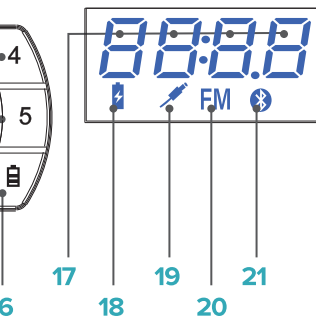

- 14 (1-5) NUMBER PRESET Buttons
- 15 VOLUME Dial
- 16 BATTERY LEVEL Button
- 17 4 (Seven-segment) LED NUMBERS
Volume Level, Current Radio Station, Presets (Eq/Radio), etc.
- 18 LOW BATTERY Indicator
- 19 AUX-IN Indicator
- 20 FM Radio Indicator
- 21 BLUETOOTH® Indicator
- 22 POWER Switch (ON/OFF)
- 23 AC POWER INPUT

 Back

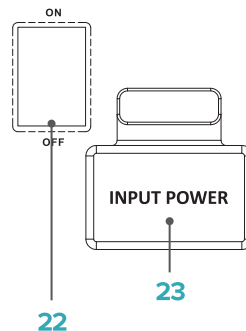

Battery & Power

Charging The Unit

IMPORTANT: Before first use, charge for 7 hours.

Connect the POWER CORD into the AC PORT on the back of the unit, then plug the other end of the cord into an AC power outlet.

- The POWER LED will blink while charging.

To Prolong Battery Life:

- If the unit is stored fully charged, re-charge every 3 months; not to exceed 6 month.
- If the unit is stored with no charge, do not exceed 15 days without charging.

Full Charge Achieved:

- 7 hours while powered OFF and 15 hours while powered ON.

Power

Located on the back of the unit.

Turning ON The Unit:

- Flip the POWER SWITCH UP / ON position
- The units LED DISPLAY will read **HI** and will automatically connect to the last audio source selected.

Turning OFF The Unit:

- Flip the POWER SWITCH DOWN / OFF position

Battery Status

Status is ONLY available while the unit is ON.

Battery Level..... Press  button

- The LED Display will show the battery level in increments of 25.
Ex: **b 25** & **Low** when below 25% charged.
- The LED Display **LOW BATTERY** Indicator will turn on when the battery level is below 25%.

USB Power Bank

The USB port is NOT an audio connection.

- When the unit is ON, the 5V 1A USB port will charge an external device using the units internal battery. (Cable not included)

Standby Mode

Enter:

- VOLUME/RADIO dial Hold (3 seconds)
- The LED DISPLAY will read **Stby**; The POWER LED will blink.
- The unit will automatically enter into STANDBY MODE after 15 minutes of inactivity or lack of connection.

Exit:

- Press any control button to wake the unit from.
- The units LED DISPLAY will read **HI** and will automatically connect to the last audio source selected.

Audio

GUITAR/MICROPHONE Input & GAIN knob


Devices plugged into the ¼" input will transmit through all audio sources. (Microphone not included)

GAIN knob:

- Turn it clockwise to increase the output of the device plugged into GUITAR/MICROPHONE input and counter-clockwise to decrease it.

AUX IN

The unit will automatically change to AUX IN mode when a 3.5 mm cable is connected into the input.

- Press the SOURCE button until the LED Display reads **AUX** and the AUX indicator  is lit.

Equalizer PRESETS

These presets are **ONLY** available when the Bluetooth® or AUX IN audio sources are selected.

- Press any NUMBER PRESET button to select a tone setting. The LED Example: The display will read **EQ-1** when the NUMBER PRESET button 1 is selected. See below for tones.

#1 - Flat, #2 - Jazz, #3 - Default, #4 - Guitar, & #5 - Vocal

FM Radio & Radio PRESETS

Selecting the FM Radio Audio Source:

- Press the SOURCE button until the LED Display reads **TUNE** and the FM Radio Indicator **FM** is lit.

Setting FM Radio Frequency:

- Use the ◀ or ▶ button to change the radio frequency. Hold either of the arrow buttons to scan for radio stations.

Setting FM Radio PRESETS Station:

- Save the current radio station to a NUMBER PRESET button by pressing and holding the number until the LED Display confirms it has been saved by reading **P1** when 1 is set, etc.

Select PRESETS Station:




- Recall a saved radio station by pressing one of the NUMBER PRESET buttons while in FM Radio.

Audio Continued

IMPORTANT: WHEN USING BLUETOOTH AND TWS PAIRING.

DON'T have a cable plugged into the **AUX IN** port.
Pair devices within **10 feet (3 meter)**; Max signal range of **33 foot (10 meter)**; Signal disruption/loss may accoure when devices are out of range from each other.


Bluetooth® Pairing

- 1 Select Bluetooth® audio Press  button
 - **BLUETOOTH® LED** Flashes Blue
 - **LED DISPLAY BLUETOOTH® INDICATOR** 
- 2 Enter Pairing Mode Hold  button (3 seconds)
- 3 Turn your audio source device' Bluetooth® ON
select **"FUGOO TRAVELER"**

Disconnect: Press the  button (3 seconds).

TWS Pairing

Wirelessly connect two compatible FUGOO TWS units.

- 1 **Transmitter:** Pair the first unit to a Bluetooth® external audio device source. (see Bluetooth® Pairing)
- 2 **Receiver:** Power ON a second TWS capatible unit.
Set to Bluetooth® audio mode.
DO NOT Bluetooth® pair to the audio device
Disconnect: Hold the  button (3 seconds).

4 Transmitter & Receiver: Hold the TWS button (2 seconds) of the Transmitter and then the Receiver to search for TWS pairing.




BLUETOOTH® LEDS:

TWS Pairing Search:Flashes Blue/Purple
Transmitter: Solid Purple
Receiver: Solid Red

Disconnect: Press the TWS button

Audio Controls

Controls are **ONLY** available in Bluetooth® and TWS audio modes.

Play / Pause Click  button
Next Track Click  button
Previous Track Click  button

VOLUME:

Master Volume Connected Bluetooth® device' volume
Adjusted the volume of the connected units (Transmitter & Receiver) independently from one another.

Unit Volume Turn **VOLUME Dial**

- Clockwise Increase
- Counter-clockwise Decrease

Specifications

Power

Battery Type	11.1V / 4400mAh
Battery Life	48 Hours (at 30% Volume)
Qi Charger	5W
USB Ouput	5V 1A

Audio

Drivers	5" 30W
Tweeters.....	(x3) 2" 5W
Audio Output	100W powered (80W battery)
THD + Noise	≤10%
Signal-to-Noise	> 75dB

Conectivity

Bluetooth Version	5.0 (10M / 33' range)
-------------------------	-----------------------

Construction

Materials	Metal, Rubber, & Plastic
Weight	7.8 lbs. / 3.54 kg
Dimensions (W x H x D)	10.5" x 11.4" x 6.9"
.....	267 x 290 x 175mm

Enviroment

Water Resistants	IPX4
Operating Temp. Range ...	32F° to 104F° / 0C° to 40C°
Operating Humidity	40-90% RH
Storage Temp. Range	-13F° to 158F° / -25C° to 70C°

Legal notices

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Limited Warranty

This Fugoo-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Blowfish Audio, LLC against manufacturing defects in materials and workmanship for a limited warranty period of one (1) year for labor and one (1) year for parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser. This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in as is condition, "close outs", "liquidation and clearance sales", "open box", "products missing accessories", or "no fault found".

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the Limited Warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the Limited Warranty service.

This Limited Warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used In the United States, Puerto Rico, and Canada by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated Bill of Sale, Receipt or Receipted Invoice must be presented upon request as proof of purchase.

We will repair your Product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the

limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This Limited Warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish: accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations,

Limited Warranty Continued

repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product result in service problems: incorrect electrical line voltage, fluctuations and surges: customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY THIS LIMITED WARRANTY SHALL

NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some States or Provinces do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights, and you may also have other rights, which vary from State to State, or Province to province. Any provision contained herein which is found contrary to State, Province or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

Support

To obtain warranty service, please contact technical support with questions

Phone: Telephone: (877) 435 7596

**Email: support@fugoo.com
Please visit [Fugoo.com](https://www.fugoo.com) for Chat support.**

**Hours of Operation: Monday - Friday: 6:00 am - 6:00 pm (PST);
Saturdays: 8:00 am to 4:30 pm (PST)
Sunday: CLOSED**

FUGOO 